

NPWT Clinical Guidelines



These guidelines are recommendations to help clinicians to establish patient-specific treatment guidelines. Please consult the patient's lead clinician about individual conditions and treatment. These guidelines are not intended as a guarantee of results, outcome or performance of NPWT.

Consult your local Smith & Nephew representative if you have any questions about operation or use of our products. For further information visit www.npwt.com

1. Introducing NPWT	4
Indications	6
Precautions	6
Contraindications	9
General guidelines	10
NPWT pressure settings	11
<hr/>	
2. NPWT consumables	12
Choosing an appropriate drain	12
<hr/>	
3. Application	13
Patient preparation	13
Preparing the wound for dressing application	15
Connecting NPWT devices and commencing therapy	17
Disconnecting NPWT devices	18
Dressing changes	18
Changing the canister	18
<hr/>	
4. Specialist applications	19
Undermined wounds	19
Tunnelled wounds	19
Options for treating multiple wounds	20
The bridging technique	20
Dermal Substitutes	22
Skin grafts	23
Skin flaps	23
Fistulae	24
Abscess dressing technique	25
<hr/>	
5. Successful outcomes - Hints and tips	26
<hr/>	
6. Healing progress – knowing when to stop or change treatment	29
Wound appearance and dimensions	29
Volume and appearance of exudate	29
Length of treatment	29
Discontinuing NPWT therapy	30
<hr/>	
7. Troubleshooting	31
Wound deterioration	31
Patient experiencing pain	31
Safety alarms	32
<hr/>	
8. Appendices	33
Appendix 1	33
Appendix 2	34
Appendix 3	35
Appendix 4	36
Appendix 5	37
Appendix 6	38
Appendix 7	42

1. Introducing NPWT

The Smith & Nephew Negative Pressure Wound Therapy (NPWT) systems are designed to apply localised negative pressure (suction) to a patient's wound site. It consists of a suction pump to generate negative pressure and a variety of wound sealing kits to deliver the therapy to the wound site.

The purpose of this document is to describe the most appropriate use of NPWT as an integral part of wound bed preparation to ensure optimal healing and cost-effective woundcare. Wound bed preparation has been defined as the process of removing the barriers to healing. Removal of these barriers is thought to allow the wound repair process to progress normally. Wound bed preparation represents a combination of both scientific knowledge and practical skill; its application can help correct abnormalities in chronic wounds and stimulate the healing process (Schultz, 2003). To optimise the use of NPWT it is essential that clinicians ensure wound bed preparation is achieved prior to, during and after therapy.



Debride wound

Effective debridement may:

- Reveal extent of tissue damage
- Reduce biochemical imbalance, senescent cells
- Reduce bacterial burden
- Reduce odour
- Optimise healing potential

Consequences of ineffective debridement are:

- Delayed healing
- Potential for infection
- Physical barrier preventing accurate assessment
- Reduced patient Quality of Life (QoL)
- Psychological aspects

Optimise healing

- Removes excess fluid oedema
- Assists in wound contraction
- Stimulates granulation tissue
- Protects from outside contaminants
- Increases vascular perfusion
- May reduce wound bioburden
- Remodels connective tissue matrix
- Encourages maturation of epithelial cells
- Maintains a moist wound healing environment

3
Know when
to stop
or change
treatment



Optimal healing
Cost-effective woundcare

Know when to stop or change treatment

- Initial therapy objectives have been met
- 100% granulation tissue in the wound bed
- Granulation tissue level with the surrounding skin
- Patient's overall condition/wound is improving
- Wound bed ready to take a skin graft/flap
- Exudate levels less than 20–50mls per day
- No improvement/reduction in size is seen in the wound bed following two consecutive dressing changes

Indications, precautions, contraindications and discontinuation of NPWT

Successful NPWT depends on conditions which are essential to wound resolution, for example:

- The wound bed must have sufficient blood flow
- The patient must receive adequate nutrition/ nutritional supplements, if they are malnourished
- Pressure relief, if appropriate, should be used
- Other co-morbidities must be optimised

NPWT indications

NPWT is indicated in a number of different wounds:

- Post-operative and dehiscent surgical wounds
- Pressure ulcers
- Diabetic/neuropathic ulcers
- Traumatic wounds
- Skin flaps and grafts
- Venous insufficiency ulcers
- Explored fistulae

Certain wounds with particular attributes may be ideal for NPWT, for example:

- Wounds that are resistant to traditional wound care and showing signs of chronicity or little progress towards healing.
- Deep/ cavity wounds with high levels of wound exudate

NPWT precautions

Precautions should be taken when using NPWT in the following cases:

- Malnourished patients who have not received adequate nutrition/nutritional supplements
- Children (Please see page 8 for additional information)
- Extra caution should be used for patients with neuropathic aetiologies or circulatory compromise.
- Non-concordant or combative patients
- Patients with infected wounds, as they may require more frequent dressing changes (please see page 8)
- Patients with burns - the devitalized burned tissue must be debrided prior to application of NPWT
- Patients with wounds in close proximity to blood vessels, delicate fascia, vital organs or exposed tendons (ensure adequate protection with overlying fascia, tissue or other protective barriers).

- Bone fragments or sharp edges could puncture protective barriers, vessels, or organs causing injury. Any injury could cause bleeding, which, if uncontrolled, could be potentially fatal. Beware of possible shifting in the relative position of tissues, vessels or organs within the wound that might increase the possibility of contact with sharp edges. Sharp edges or bone fragments must be eliminated from the wound area or covered to prevent them from puncturing blood vessels or organs before the application of NPWT. Where possible, completely smooth and cover any residual edges to decrease the risk of serious or fatal injury, should shifting of structures occur. Use caution when removing dressing components from the wound so that wound tissue is not damaged by unprotected sharp edges.
- Enteric fistulae require special precautions to optimise therapy (See specialist dressing section for options)
- **Defibrillation:** Remove the dressing if defibrillation is required in the area of dressing placement. Failure to remove the dressing may inhibit transmission of electrical energy and/or patient resuscitation.
- **Magnetic Resonance Imaging (MRI)-Therapy Unit:** The Therapy Unit is MR Unsafe. Do not take the Therapy Unit into the MR environment.
- **Magnetic Resonance Imaging (MRI)- Dressings:** Dressings can typically remain on the patient with minimal risk in an MR environment.
- **Hyperbaric Oxygen Therapy (HBO):** Do not take the Therapy Unit into a hyperbaric oxygen chamber. The Therapy Unit is not designed for this environment, and should be considered a fire hazard. After disconnecting the Therapy Unit, either (i) replace the dressing with another HBO compatible material during the hyperbaric treatment, or (ii) cover the unclamped end of the tubing with moist cotton gauze.

Although not contraindicated with NPWT, extra care should be taken in patients with bleeding problems, including:

- **Haemostatic Agents applied at the wound Site:** Non-sutured haemostatic agents for example, bone wax, absorbable gelatin sponge, or spray wound sealant may, if disrupted, increase the risk of bleeding, which, if uncontrolled, could be potentially fatal. Protect against dislodging such agents. Consideration should be given to the negative pressure setting and therapy mode used when initiating therapy.
- Patients receiving long-term anticoagulant therapy
- Patients with haemophilia, and
- Patients with haemoglobinopathies, such as sickle cell disease

Extra caution should be taken with patients with sickle cell disease, as they do not necessarily bleed actively, but the shape of the red blood cells changes during an acute phase brought on by illness or injury. The altered shape of the cells can cause blockages in the microcirculation, which can cause extreme pain. If pain worsens or persists, therapy should be discontinued. These patients require close observation, and may require lower pressure settings.

- Patients receiving anticoagulant therapy or platelet aggregation inhibitors, or those who are actively bleeding or have weakened irradiated blood vessels or organs.

If significant bleeding develops, immediately discontinue the use of the NPWT; take measures to stop the bleeding. Do not remove the dressing until the treating clinician or surgeon is consulted. Do not resume the use of NPWT until adequate haemostasis has been achieved, and the patient is not at risk for continued bleeding.

- **Spinal Cord Injury:** In the event a patient experiences autonomic hyperreflexia (sudden elevation in blood pressure or heart rate in response to stimulation of the sympathetic nervous system), discontinue NPWT to help minimize sensory stimulation and seek immediate medical assistance.
- **Patient Size and Weight:** The size and weight of the patient should be considered when prescribing NPWT. Infants, children, certain small adults and elderly patients should be closely monitored for fluid loss and dehydration. Also, patients with highly exuding wounds or large wounds in relation to the patient size and weight should be closely monitored, as they may have a risk of excessive fluid loss and dehydration. When monitoring fluid output, consider the volume of fluid in both the tubing and canister.
- **800mL Canister Size:** DO NOT USE the 800mL canister on patients with a high risk of bleeding or on patients unable to tolerate a large loss of fluid volume, including children and the elderly. Consider the size and weight of the patient, patient condition, wound type, monitoring capability and care setting when using this canister. This canister is recommended for acute care (hospital) use only.

NPWT and wound infection

NPWT is safe to use on colonised, critically-colonised and infected wounds. Most wounds, particularly chronic wounds, such as pressure ulcers and leg ulcers, are colonised by bacteria. These can be grown on a wound swab, but do not necessarily delay healing or create undue problems with the healing environment. When a wound becomes critically colonised or clinically infected, a host response occurs. Patients receiving NPWT should be monitored for clinical signs and symptoms of wound infection, and additional treatments instigated accordingly, as and when such conditions arise.

NPWT and children

- Either filler can be used with paediatric patients
- A wound contact layer must be used with all wounds
- Lower pressures are sufficient to provide therapeutic results with children. As a general rule start low and increase pressure in line with tolerance and clinical results.
- Devices should be set on continuous therapy in all children unless specified otherwise by the lead clinician.
- Young children (< age 5) may need to go to theatre for placement (Dressing changes)
- Dressing changes should occur twice a week minimum unless otherwise specified by the lead clinician.

- Closely monitor any fluid loss into the canister and replace as per lead clinician instructions. This is of particular importance in neonates/infants and younger children. Always use a small canister and consider partially pre filling the volume with sterile saline/sterile water to ensure canister full alarm alerts user to excess fluid loss.
- Progress should be seen in the first week of therapy
- Average treatment time is 1-2 weeks

NPWT contraindications

NPWT is contraindicated in certain cases:

- Untreated osteomyelitis: Suspected or confirmed osteomyelitis must be treated as per local guidelines prior to and during any NPWT, until resolved.
- Malignancy (except palliative care): NPWT is not recommended in malignant wounds, but can be used post-tumour removal, if tissue margins are clear of disease (if unsure, please ask for guidance or clarification from lead clinician).
- Unexplored fistulae: Fistulae must be investigated to establish the location and extent of communication between organs and establish causation, e.g. a small bowel fistula with a distal obstruction will not seal unless the distal obstruction is cleared. However, if there is no distal obstruction, it may heal over with appropriate management. As such, the endpoints of care with NPWT will differ depending on the results of investigations.
- Exposed arteries, veins or organs: Negative pressure, directly applied to exposed arteries or veins, could result in vessel compromise. The patient's consultant must approve use of NPWT prior to use.
- Necrotic tissue with eschar/ dry wounds: If a dry, necrotic eschar is covering the wound, or if there is a large amount of necrotic issue present, NPWT is not appropriate. Best results are obtained if the wound is debrided prior to NPWT application. Small amounts of soft tissue slough will autolyse during therapy. As long as haemostasis is achieved, NPWT should be applied as soon after debridement as possible, if not immediately.
- Severe peripheral arterial disease: Ankle Brachial Pressure Index ≤ 0.5 needs investigation and, if appropriate, revascularisation prior to commencement of NPWT.
- Any cavity/ sinus, of which the origin is not clearly visible, or cannot be gently probed to gain an indication of origin: Complications are rare, but can include infection, desiccation, pain, erosions, odour, and tissue ingrowth (into the filler which may lead to difficulty on removal), maceration, and bullae.

General NPWT dressing guidelines and precautions

- **Dressing Placement:** Always use dressings from sterile packages that have not been opened or damaged. Do not place any RENASYS° -F/P (foam) dressings into blind/unexplored tunnels. The RENASYS-G channel drain may be more appropriate for use with explored tunnels. Do not force dressings into any area of the wound, as this may damage tissue, alter the delivery of negative pressure, or hinder exudate and dressing removal.

Always count the total number of pieces of dressing used in the wound and document that number on the drape and in the patient's chart. Also document the dressing change date on the drape.

- **Dressings are not bio-absorbable:** **Always count the total number of pieces of dressing removed from the wound and ensure the same number of pieces have been removed as placed.** Dressings left in the wound for greater than the recommended time period may foster ingrowth of tissue, and create difficulty in removing them from the wound, or lead to infection or other adverse events.
- **Standard Dressing Precautions:** To reduce the risk of transmission of blood borne pathogens, apply standard precautions for infection control with all patients, per institutional protocol, regardless of their diagnosis or presumed infection status. In addition to gloves, use gown and goggles if exposure to body fluid is likely.
- **Protect Peri-wound Skin:** Consider use of a skin preparation product to protect peri-wound skin. Do not allow RENASYS-F/P to overlap onto intact skin. Protect fragile/friable peri-wound skin with additional drape, hydrocolloid or other transparent film. Multiple layers of the drape may decrease the moisture vapour transmission rate, which may increase the risk of peri-wound maceration. To avoid trauma to the peri-wound skin, do not pull or stretch the drape over dressings during drape application.
- **Acrylic Adhesive:** The drape has an acrylic adhesive coating, which may present a risk of an adverse reaction in patients who are allergic or hypersensitive to acrylic adhesives. If a patient has a known allergy or hypersensitivity to such adhesives, do not use the drape. If any signs of allergic reaction or hypersensitivity develop, such as redness, swelling, rash, urticaria, or significant pruritus, discontinue use and consult a physician immediately.

Negative pressure settings

The guidelines on therapy settings in this booklet are general recommendations. You may wish to vary the pressure settings to optimise NPWT therapy based on individual patient need and the lead clinician's guidance.

Negative pressure may be increased by 10mmHg increments where:

- High levels of exudate/excessive drainage
- Large wound volume/size
- There is a tenuous seal/positional difficulties maintaining the seal

High pressure may cause tissue necrosis and increase pain for patients
Careful consideration and consultation with the lead clinician should be sought prior to exceeding -120 mmHg

Negative pressure may be decreased by 10mmHg increments where:

- Pain or discomfort is not relieved by appropriate analgesia
- The patient is elderly and/or nutritionally compromised
- There is a risk of excessive bleeding (for example, patients on anticoagulation therapy)
- The circulation is compromised (for example, peripheral arterial disease)
- There is excessive granulation tissue growth
- With pressures lower than -40mmHg consider discontinuing therapy





Continuous versus Intermittent Therapy:

Continuous, rather than intermittent therapy is recommended over unstable structures, such as an unstable chest wall or non-intact fascia, in order to help minimise movement and stabilise the wound bed. Continuous therapy is also generally recommended for patients at increased risk of bleeding, highly exudating wounds, fresh flaps and grafts, and wounds with acute enteric fistulae.

2. NPWT consumables


RENASYS® -G Dressings/Drains

Table 1 - Choosing an appropriate drain

	Description	Uses	Considerations
Flat drain 	<ul style="list-style-type: none"> Flat perforated drain Silicone Will be used 80% of the time Handles heavy to no drainage without sediment present Deep or shallow wounds 	<ul style="list-style-type: none"> Multipurpose drain Surgical wounds, wound dehiscence, shallow or deep wounds, large or small wounds, and venous insufficiency ulcers Can be used throughout the entire healing process 	<ul style="list-style-type: none"> Must be used in a 'flat' manner Cannot be curled into the wound The drain is measured to the length of the wound minus 1-2cm to allow for wound contraction The measurement begins with the first holes. The part without holes does not go in the wound bed
Channel drain 	<ul style="list-style-type: none"> Round, fluted drain designed for wounds with moderate depth and moderate to no drainage. Non-Hollow, Non-Perforated drain Four channels run the length of the drain serving as 'gutters' to guide exudate to the suction source Silicone 	<ul style="list-style-type: none"> May be used for undermined wounds, tunnels or sinus tracts Can be threaded directly into a tunnel without being wrapped in wound filler The no perforation/non-hollow design prevents tissue in the tunnel from being damaged by the suction 	<ul style="list-style-type: none"> Because the drain is non-hollow, it cannot be crimped closed The suction source is the area where the channels enter the tubing. There are only 4 small openings Will not tolerate thick exudate or exudate containing sediment
10 Fr and 19 Fr round drain 	<ul style="list-style-type: none"> Large or small, round silicone drain Multiple perforations Curts into undermined areas Large - indicated for heavily exuding wounds without sediment present Small - indicated for shallow, small, low exuding wounds without sediment present 	<ul style="list-style-type: none"> Large Coccyx/Sacroccocygeal, abdominal, or surgical wounds Small drain can be used for small wounds such as a diabetic foot ulcer The drain can be curled into the wound bed or used in a linear fashion (measure to the length of the wound minus 1cm to allow for wound contraction) 	<ul style="list-style-type: none"> 19 Fr can handle large amounts of exudate Wound depth must be twice that of the diameter of the drain or tissue damage can result
Irrigation/aspiration drain 	<ul style="list-style-type: none"> Round, perforated drain designed for wounds with heavy drainage, especially those with sediment present Silicone Dual lumen design allows for irrigation without disturbing the dressing 	<ul style="list-style-type: none"> Fistulae which are usually very high output wounds Large wounds with thick, heavy exudate, or drainage with sediment present Wound irrigation To irrigate the wound turn pump off and instill solution via the irrigation port until wound filler is saturated Allow dwell time as directed by lead clinician then switch pump back on to remove excess fluid Repeat if indicated by lead clinician or blockage is suspected 	<ul style="list-style-type: none"> Standard size 28 Fr Do not adjust pump pressures; continue between the ranges of -60 to -80mmHg

RENASYS-F/P Dressings

Table 2

	Description	Uses	Considerations
Port 	<ul style="list-style-type: none"> Large silicone drain Foam dressing available in four sizes, S, M, L, XL 	<ul style="list-style-type: none"> Multipurpose drain for use with all foam applications 	<ul style="list-style-type: none"> Can handle large amounts of exudate The Port must be placed on top of the film covering the wound filler If concerned about growth of granulation tissue use a wound contact layer

3. Application

The following recommendations offer a step-by-step guide to dressing application. Universal precautions should be observed. Use clean/aseptic or sterile techniques for application depending on local guidelines.

Prior to use of NPWT, the clinician(s) treating the wound must assess how to best use the system for an individual wound. It is important to carefully assess the wound and patient to ensure clinical indications for NPWT are met.

Patient preparation

In addition to considering the use of NPWT to benefit the patient and the wound, the clinician must first undertake a holistic assessment of the patient and consider the following points:

- Is the therapy appropriate for the wound, and also for the patient?
- The practitioner should consider the patient's general wellbeing and state of health, as well as product indications and precautions, and concomitant therapies/ medication
- What type of wound is to be treated, where is the wound located, and what type of tissue is present?

Patient information

It is important to prepare the patient carefully before any procedure, as explanations are more likely to result in a relaxed patient, which makes any procedure much safer. If any pain is experienced, the procedure should be stopped immediately and analgesia reviewed before re-commencement, if appropriate.

There are many methods of treating wounds, and it is important that patients are involved in the decision, so that they are able to give informed consent. To make effective clinical decisions and ensure that patients are fully informed, it is essential that clinicians are aware of the different methods of treating wounds. The clinician should also be aware of the professional requirements for competence and the risks and benefits of each method.

Informed consent

It is vital that the patient understands what he or she has consented to, and it is an important role of the clinician to check and ensure that this happens (Cable, Lumsdaine and Semple, 2003). Effective communication is vital in gaining consent.

Patients have a right to know exactly what they are consenting to, and information should empower them and enable them to make a decision. The clinician needs to be able to provide a balanced perspective in a form that is appropriate for each individual patient.

In order to make an informed decision, the patient should know:

- What equipment is proposed for use
- How the equipment works
- What the objective of the treatment is
- The likely impact of the treatment on the progression of wound healing
- The likely outcome if the treatment is not given
- What alternatives are available
- Any possible side effects (including pain), and how these will be managed
- Any possible impact of the therapy on the patient's quality of life or length of stay in hospital, and how long the treatment is likely to take.

Some patients may be particularly interested in the mode of action of the treatment and how their wound is progressing. Patients should be encouraged to be as involved as possible in their treatment, and in their journey to wound healing.

Clinicians are accountable for their actions, and should always ensure that they are competent in obtaining consent from the patient. This means ensuring that you have the appropriate skills to undertake an assessment of the patient's capacity to give consent, and the communications skills to ensure that they are adequately informed.

The following parameters should be noted at the outset of therapy:

- Start date and duration of wound pre therapy
- Dressings, materials and supplies used including any adjunctive therapy or dressings
- Pressure setting(s) to be used
- Frequency of dressing changes
- Wound type, location, size (length, width and depth). Tissue types present at the wound bed. If necrotic tissue or slough is present consider debridement prior to commencement of therapy to optimise outcomes.

Dressings should be changed 48 hours after initial application if no leak is present. If the patient is comfortable and the wound is progressing, dressing changes should occur 2-3 times a week thereafter. In the event of heavy exudate more frequent dressing changed may be needed.

Preparing the wound for dressing application

- Appropriate debridement of eschar or hardened slough if present
- Achieve haemostasis
- Thoroughly clean and irrigate wound according to local guidelines using normal saline or solution as directed by the lead clinician.

NB: For more information on wound bed preparation see Appendix 2

Prepare the peri-wound area

- Dry the peri-wound tissue
- If required you may apply a skin preparation such as a liquid surgical adhesive or liquid barrier film to the periwound tissue.
- For patients with fragile or excoriated peri-wound tissue, a protective, thin-layered dressing such as a moisture vapour-permeable adhesive film dressing may be applied to the peri-wound area, eg, cut thin strips of spare drape.

Wound filler

- Note the wound type, and select an appropriate filler and drain (see table 1 and 2 on page 12)
- Document the wound dimensions in the patient's notes at the beginning of treatment
- If appropriate, trim a single layer of non-adherent wound contact layer and lay across the wound bed

If using RENASYS® -G (gauze) see Appendix 3

- Moisten the wound filler with saline and gently place it in the wound cavity, covering the entire wound base and sides, tunnels and undermined areas. Ensure the filler stands slightly above the top of the wound

Applying the drain

- If required, cut the drain so that it fits within the wound margins if using the flat or irrigation aspiration drain, or coil the drain to fit if using the channel or round drains, these drains may also be cut to fit if appropriate.
- Place your chosen drain into the wound sandwiched between the layers of wound filler
- Ensure the drain does not come into contact with the wound bed
- Secure the drain at the wound margin with strip paste

The channel drain can be placed directly into the wound bed – please see tunnelling section on page 19 for application technique.

Preparing the drape

- Size and trim the drape to cover the dressing as well as an additional 3–5cm border
- Apply drape over the entire wound, including the wound filler and about 3–5cm of surrounding intact skin. Cutting the drape into smaller pieces may aid application, ensuring that each piece overlaps.
- If the skin surrounding the wound site is excessively moist or oily, use of a NO-STING SKIN-PREP® wipe may improve adhesion.
- Seal around the tubing and drain using the strip paste

NB: Do not stretch the drape or place onto skin under tension.

Do not discard excess drape as you may need it to patch the dressing if a leak becomes apparent when the suction is applied.

If using RENASYS® -F/P (foam) see Appendix 4

- Cut the foam to fit the wound perfectly ensuring it is level with the surrounding skin. If multiple pieces of foam are inserted into a cavity wound please ensure all pieces are in contact with one another and there is no dead space. Please document the number of pieces of foam used clearly in the patient notes and on the dressing.
- If the wound is larger than the largest dressing, more than one dressing may be required. If you use more than one ensure that all adjoining edges are in direct contact with each other to ensure an even distribution of negative pressure.
- If multiple pieces of wound filler are used, count the pieces of wound filler and record the total in the patient's notes - this may also be annotated on the drape with a permanent marker.

Preparing the drape

- Size and trim the drape to cover the dressing as well as an additional 3–5cm border
- Apply drape over the entire wound, including the wound filler dressing and about 3–5cm of surrounding intact skin. Cutting the drape into smaller pieces may aid application, ensuring that each piece overlaps.
- If the skin surrounding the wound site is excessively moist or oily, use of a NO-STING SKIN-PREP wipe may improve adhesion.

NB: Do not stretch the drape or place onto skin under tension.

Do not discard excess drape as you may need it to patch the dressing if a leak becomes apparent when the suction is applied.

Applying the Port

- Cut a small circular hole in the centre of the drape over the foam
- Remove the backing from the Port
- Align the opening of the Port over the hole in the film, use gentle pressure to anchor the Port to the film.
- Smooth the dressing down whilst removing the frame

NB: On application of light pressure the wound filler (foam or gauze) should conform easily to the contours of the wound and be level with the surrounding skin. Overpacking may inhibit reduction of the wound size. Try to ensure wound filler is contained within wound margins to avoid peri-wound excoriation from wound exudate.

Connecting the NPWT device and commencing therapy

- Place the NPWT device unit on a level surface
- Remove the canister from the sterile packaging and place it into the NPWT device
- If using RENASYS° EZ:
 - Connect the filter to the device (If using RENASYS GO, the canister has an integrated filter)
 - Connect the canister tubing to the canister, (If using RENASYS GO, the canister has integrated tubing).
- Attach the dressing tubing to the canister tubing. Make sure the dressing tubing clamp is open and caps are disconnected.
- Press the power button to turn on the NPWT device

NB: Setting the suction level is a decision that the healthcare provider must make based on assessment of the individual wound.

- -80mmHg is the recommended pressure setting and should be sufficient for most wound types. This can be adjusted if required for specific wound types in accordance with local guidelines or in line with the lead clinician instructions.
- Press the START button to activate NPWT. In less than 1 minute the dressing should collapse, unless leaks are present.
- If you hear or suspect a leak (small leaks may create a whistling noise), you can often fix it by gently pressing around the drain and/or wrinkles in the drape. If this is a large area, gently lifting and cutting excess or wrinkled drape back to the level of the wound margin and resealing section by section is generally the best method for achieving and maintaining a seal. This should be done with the device in standby mode to ensure suction does not interfere with the drape application and cause excess wrinkling of the drape.

Disconnecting the NPWT device

In the event that the patient needs to be disconnected from the pump (eg, rehabilitation, ambulation, etc, and exudate is controlled, follow the steps below:

- Close the clamp on the dressing tubing.
- Separate canister tubing and dressing tubing by disconnecting them at the connector
- Allow the therapy unit to pull the exudate in the canister tubing into the canister and close the cap on the canister tubing.
- Switch the vacuum off by pressing the POWER button

NB: Patients should be disconnected from the unit only for short periods of time and for no more than a total of 2 hours a day.

Dressing changes

Follow above steps listed for disconnecting the NPWT device:

- Wait for 15–20 minutes to allow for wound filler to decompress
- Gently stretch the drape horizontally and slowly remove from the skin. Do not peel
- Gently remove wound filler from the wound
- Consider simultaneous saline irrigation if required
- Discard disposables in accordance with local guidelines

NB: If the dressing is accidentally removed and no trained staff are available to reapply, apply an appropriate dressing and notify the trained staff for reapplication as soon as possible.

Dressings should be changed 48 hours after initial application if no leak is present. If the patient is comfortable and the wound is progressing, dressing changes should occur 2-3 times a week thereafter. In the event of heavy exudate more frequent dressing changed may be needed.

Changing the canister

A new disposable canister kit should be used with each patient and changed a minimum of once per week, when the device alarms to suggest it is full or if the odour from the wound is offensive.

4. Specialist applications

Undermined wounds

(see Appendix 5 and 6)

Undermining is a tunnel or pocket under the edge(s) of a wound. An undermined wound is smaller at the surface than it is at the base.

There are two options for undermined wounds:

Option 1 - RENASYS® -G/RENASYS-F/P

- Cover the wound bed and fill the undermined space with either RENASYS-G saline-moistened wound filler or RENASYS-F/P (foam).
- If using RENASYS-G:
 - Insert the drain as per described previously in the application technique section
- If using RENASYS-F/P:
 - Apply the port as per described previously in the application technique section
- Attach to machine, set and start the therapy

Option 2 - RENASYS-G

- Wrap a round or channel drain with saline-moistened wound filler
- Curl the wrapped drain into the undermined space
- Fill the defect to skin level with saline-moistened wound filler and seal as described previously in the application technique section
- Attach to machine, set and start the therapy

NB: Please ensure the undermined area is larger than the diameter of the drain plus the wound filler.

Tunnelled wounds

(see Appendix 5 and 6)

Tunnelling is the extension of the wound bed into adjacent tissue, also known as a sinus tract

NB: Care should be taken to ensure that the sinus does not communicate with internal structures/organs prior to commencement of treatment.

There are two options to choose from when dressing wounds with a tunnel present:

Option 1 - RENASYS-G

When the tunnel is only slightly larger than the drain circumference:

- Measure the sinus - Cut the channel drain 1-2cm smaller than the sinus
- Insert a channel drain completely into the tunnel and then retract the drain approximately 1–2cm to allow for closure. If present fill the remaining defect to skin level with saline-moistened wound filler and seal as described previously in the application technique section.
- Attach to machine, set device to desired pressure and start the therapy

Option 2 - RENASYS® -G

When the tunnel is larger than the drain circumference:

- Either fill the tunnel with saline-moistened wound filler or wrap the drain in wound filler and insert into the tunnel, leaving approximately 1–2cm at the distal end of the tunnel to allow for closure.
- Fill the defect to skin level with saline-moistened wound filler and seal as described previously in the dressing application section.
- Wrap the remaining drain that exits the tunnel in saline-moistened wound filler and seal as described previously in the application technique section.
- Attach to machine, set device to desired pressure and start the therapy

The above techniques leave the distal end of the tunnel clear of dressing/drain and enables the distribution of higher pressures to collapse the edges together, allowing the wound to granulate from the distal portion forward.

Options for treating multiple wounds

For treatment of wounds that are of differing aetiology or are some distance apart it may be best to use a Y connector.

Using a Y connector:

- Dress both wounds as per instructions in section 3
- Connect both dressing tubing sets to the Y connector
- Connect the Y connector to the canister tubing
- Attach to machine, set device to desired pressure and start the therapy

The bridging technique

(see Appendix 5 and 6)

Wounds that are in close proximity to one another on the same patient and of similar pathologies may also be treated with one NPWT device using a technique known as bridging. The advantage of bridging is that it requires only one dressing kit.

There are two options for using the bridging technique:

Option 1 - RENASYS-G /RENASYS-F/P

- Using transparent film or thin hydrocolloid, protect the intact skin creating a bridge at least 5cm in width connecting the two wounds. Fill both wounds to skin level with wound filler
- Connect the two wounds by extending the wound filler from the first wound to the second wound on top of the dressing bridge in a continuous line (if multiple pieces are used then please ensure each piece is in contact with each other and there are no gaps).
- If using RENASYS-G:
 - Insert the drain in the wound filler centrally on the wound filler bridge between both wounds. Secure the drain using dressing insertion techniques described.
 - Seal both wounds and all exposed wound filler and the drain with drape as for all dressing applications.

- Attach to machine, set control panel to desired pressure and start the therapy
- If using RENASYS® -F/P:
 - Seal in both wounds and all exposed filler with drape as for all dressing applications
 - Apply the Port to the wound filler centrally over the wound bridge using the technique previously described.
 - Attach to machine, set control panel to desired pressure and start the therapy

Option 2 - RENASYS-G / RENASYS-F/P

Where only one wound is present this technique can be used to move the drain tubing from a wound's periphery to a non-weight bearing area.

- Protect the intact peri-wound skin using either drape or a thin hydrocolloid
- Choose the non-weight bearing area where you want to place the drain (RENASYS-G)/Port (RENASYS-F/P) and apply a dressing bridge at least 5cm in width running from the wound to this area in a continual strip (if multiple pieces of drape or thin hydrocolloid are used please ensure they overlap). Ensure this is as close as possible to the wound.
- Fill the wound to skin level with wound filler
- Cover the dressing bridge with wound filler to connect the wound to the non-weight bearing area with a continual strip of wound filler ensuring complete contact with the wound filler in the wound bed.
- If using RENASYS-G:
 - Place the drain at the non-weight bearing end of your dressing bridge on top of the wound filler, secure the drain using strip paste or drape. You may cut the drain to size if necessary.

NB: Length of drain should be no less than 3cm and if perforated include at least one set of perforations.

- Seal all dressing components using drape as for all dressing applications
- Attach to machine, set and start the therapy
- If using RENASYS-F/P:
 - Apply the Port at the non-weight bearing end of your dressing bridge on top of the wound filler
 - Attach to machine, set and start the therapy

Dressing wounds smaller than the RENASYS Port (see appendix 6)

For wounds that are smaller in dimension than the RENASYS Port it is important to protect the peri-wound skin from coming into contact with the foam dressing or Port.

- Protect the intact peri-wound skin using either drape or a thin hydrocolloid
- Cut the foam to fit the size and shape of the wound. Place the foam into the wound cavity
- Cut a larger piece of foam ensuring it is larger than the circumference of the Port
- Place the large piece of foam on top of the first piece of foam dressing
- Cover the foam with transparent adhesive film. The film should extend an additional 5cm beyond the wound margin to facilitate an adequate seal.
- Apply the Port as per previously described application technique
- Attach to machine, set and start therapy

Use over skin substitutes/Dermal replacements

- Depending on the severity and depth of a skin defect, the body can only heal itself to a certain degree. This has led to the development of dermal substitution materials to be developed. Examples of these are INTEGRA™, MATRIDERM™ and ALLODERM™.
- They help in the reconstruction of the natural skin architecture where the body is unable to build destroyed or surgically removed dermis on its own. Tissue substitute materials have seen widespread use in recent years. The primary areas of use include burns, cancer removals and plastic and reconstructive procedures to rebuild the damaged skin and achieve optimal aesthetic outcomes.
- Following surgery and excision, the dermal implant is laid on top of the freshly prepared wound bed and secured in place. This may be achieved by the use of staples, fibrin glues or just firm compression. It is very important that the implant is in very close ('fixed') proximity to the wound surface and does not move once placed. This is because new dermal cells need to invade the scaffold of the implant, in a moist environment and form new granulation tissue. This usually occurs over a couple of weeks and then the dermal surface can be either left to epithelialise or a split thickness skin graft applied.
- It is important that the wound environment is moist, not saturated and a degree of bacterial control is in place. One major cause of dermal implant failure is the development of infection, haematoma or seroma which can result in the complete or partial loss of the dermal replacement, which in turn can lead to further surgical procedures to remove it and replace it if appropriate.

Dermal Replacement Synergies with NPWT

- In the management of grafted wounds it is important to achieve a light and uniform pressure over the graft, in order to prevent dead spaces where a haematoma or seroma may form. Uniform pressure and a good fixation of the graft are the main mechanical elements to ensure that a skin graft takes.
- Both gauze and foam wound contact layers in NPWT systems have been successfully used to stabilise and fix these replacements in close proximity to the wound bed. They also facilitate exudate management and contribute towards the management of bacterial burden.
- NPWT used in this indication is used in the same way as described above for managing skin graft sites. Following initial fixation, pressures of -50 to -80mmHg may be considered. The period of use will be judged by the lead clinician and treatment ceased when the amount and quality of well perfused granulation merits grafting to facilitate closure. NPWT may also be continued following the skin grafting phase.
- Infection is one of the main causes of dermal replacement loss. Key signs of infection developing that can result in loss of the implant are pain, spreading cellulitis, purulent exudate and fragile consistency of graft/granulation tissue.

Skin grafts (With either filler)

(see Appendix 5)

The goals for using NPWT with grafts include keeping the area free from excess moisture, holding the graft in place, and improving graft take.

- Cover the entire graft with a non-adherent wound contact layer extending at least 1–2cm beyond the suture/staple line.
- Place a layer of wound filler over the non-adherent contact layer
- If using RENASYS® -G:
 - Place the drain as close to the middle of the wound as possible. Cut to fit the wound dimensions if required.
 - Place a layer of saline-moistened wound filler over the drain in the same fashion as the first layer. Seal both layers and the drain using the drape and/or strip paste as for all dressing applications.
 - Attach to machine, set control panel to desired pressure and start the therapy
- If using RENASYS-F/P:
 - Seal the filler in place with drape, cut a small hole and apply the Port as per dressing application technique.
 - Attach to machine, set control panel to desired pressure and start the therapy

NB: Lower pressure ranges of -40 to -80mmHg are sufficient for skin grafts

Skin flaps (with either filler)

(see Appendix 5)

The benefits of using NPWT with flaps include keeping the area free from excess moisture, removing any oedema holding the flap in place, and improving flap take.

- Cover the intact skin of the flap with transparent film to within approximately 1–2cm of the suture line
- Cover the opposite side of the suture line with transparent film to within approximately 1–2cm of the suture line (creating a 'ring' of exposed skin and suture line).
- Cover the exposed sutures with non-adherent contact layer
- Place a layer of wound filler to extend just beyond the non-adherent wound contact layer that is covering the sutures.
- If using RENASYS-G:
 - Position the drain as close to the middle of the wound as possible. Cut to fit the wound dimensions if required.
 - Place a second layer of saline-moistened wound filler over the drain in the same fashion as the first layer. Seal both layers and the drain using the drape and/or strip paste as for all dressing applications.
 - Attach to machine, set control panel to desired pressure and start the therapy
- If using RENASYS-F/P:
 - Seal the filler in place with drape, cut a small hole and apply the Port as per dressing application technique.
 - Attach to machine, set control panel to desired pressure and start the therapy

For skin grafts/dermal replacements and skin flaps:

- Set the machine at negative pressure of between -40 and -80mmHg
- Monitor exudate level – it should begin to decrease after the first 24 hours of treatment
- Duration of treatment with NPWT is up to the lead clinician, but as a general guide the time lapse between dressing changes **should not** exceed 5 days.

Fistula

Definition – an abnormal opening or track between two or more structures or spaces.

Fistula can be internal or external:

Name	From	To	Type
Enterocutaneous	Intestine	Skin	External
Recto-vaginal	Rectum	Vagina	Internal
Vesicocutaneous	Bladder	Skin	External

- Internal – communication is between a body cavity or hollow organ to another body cavity or hollow organ
- External – communication between a hollow organ and the skin

Fistula terminology

Described by the anatomic location or the site of origin and the site of termination

Fistula may also be described by amount of output:

- High output – 500ml or more / 24 hours
- Moderate output – 200–500ml / 24 hours
- Low output – less than 200ml / 24 hours

In small bowel enteric fistulae the aim is to convert high output fistulae to low output (less than 200ml per 24 hours) fistulae. Low residue diets and reduced oral intake are examples of approaches to achieve this, however, advice and guidance must be sought from the lead clinician.

Dressing application:

Option 1 RENASYS® -G: Incorporating the Fistula

- Use thin hydrocolloid and apply in thin strips around the wound to protect the peri-wound skin
- Cover entire wound bed with a single layer of moistened AMD™ Kerlix™ roll
- Place large bore perforations of irrigation/aspiration drain in close proximity and distal to fistula opening. Secure drain at exit point with strip paste.
- Fill remaining cavity with additional saline-moistened wound filler
- Cover wound with transparent film. Secure drain with strip paste and waterproof tape using Chevron technique.
- Change dressing three times a week
- Frequency of dressing changes may decrease as exudate levels decrease
- Pressure Setting: -60 to -80mmHg

Option 2 RENASYS-G/RENASYS-F/P: To isolate the fistula

- Cut a single layer of wound contact layer to fit wound bed leaving fistula mouth exposed
- Cut/insert chosen wound filler to wound bed leaving fistula mouth exposed
- If using RENASYS-G:
 - Apply drain between layers of moistened filler
 - Isolate fistula using a circle of strip paste/stoma paste circumferentially
 - Apply drape to wound to seal filler at wound edges, ensure drape is applied up to the edge of the fistula but not covering it.
 - Insert and seal drain through the drape
 - Attach drain to device and switch on to start negative pressure
- If using RENASYS-F/P:
 - Seal the filler in place with drape, cut a small hole and apply the Port as per dressing application technique.
 - Attach drain to device and switch on to start negative pressure
- Look for leaks and patch as necessary
- Apply stoma bag to fistula mouth to collect effluent

Abscess dressing technique: RENASYS-G channel drain

This can be used if the entrance site to the abscess cavity is the same size or only slightly larger than the channel drain diameter (10Fr).

- After cleaning the wound, pat peri-wound skin dry and apply NO-STING SKIN-PREP®
- Protect peri-wound skin by applying hydrocolloid or other protective dressing
- Cut the channel drain to length of the abscess minus 1cm to allow for contraction
- Insert drain into abscess ensuring the 'hub' or the suction source of the channel drain is secure inside the wound bed.
- Secure drain with strip paste
- Cover entire area, including strip paste, with transparent dressing
- Attach to machine, set and start the therapy

5. Successful outcomes - Hints and Tips

Using NPWT

- Ensure that the patient/wound is suitable
- Ensure accurate diagnosis of wound aetiology and that all underlying and associated causes have been addressed
- Ensure appropriate wound debridement prior to treatment
- To ensure a good seal has been achieved, cut drape into small pieces and apply so they overlap piece by piece to avoid wrinkles that can facilitate air entry at the wound margins
- Ensure accurate drain selection and indication-specific dressing techniques are used as appropriate
- Do not pack the wound filler; place gently into the wound and accurately record the number of pieces used in the patient's notes and, if possible, on the drape
- Do not place directly over exposed organs/and or exposed major blood vessels. If appropriate, protect with non-adherent contact layer prior to application of wound filler
- Monitor the patient and check the device for alarms if they occur
- If no response/improvement in the wound is observed within the first 2 weeks, reconsider treatment/reassess the patient to establish reasons
- Therapy should remain ON for the duration of the treatment. NPWT dressings should not be left *in-situ* without active NPWT
- Care must be taken to ensure that the drain is placed without any kinks to avoid any occlusion alarms
- Care must be taken to position the dressing tubing to avoid the risk of the patient lying on the tubing, and to position the device appropriately to avoid the risk of causing a trip hazard
- When bathing/showering, the patient must disconnect from the device
- Do not apply NO-STING SKIN-PREP® wipes supplied in the RENASYS® -G dressing packs directly onto open wounds
- Seek advice/support from local Smith & Nephew personnel if you experience problems during therapy.

Please contact the 24-hour Smith & Nephew NPWT Clinical Support line:

UK: 0800 9155394

Ireland: 1800 30 36 22

Preventing adherence

To prevent the dressing from adhering to the wound bed, you may consider:

- Applying a single layer of wide-meshed non-adherent dressing between the dressing and the wound. The non-adherent material must have pores that are wide enough to allow the unrestricted passage of air and fluid.

Managing dressing adherence

- If previous dressings were difficult to remove despite following these instructions, consider introducing normal saline into the dressing
- Turn POWER off and close the cap on the canister tubing.
- Gently remove the dressing
- If significant discomfort is experienced during dressing changes you may, on advice of the lead clinician, consider introducing a suitable topical anaesthetic solution down the drain into the wound bed. Follow product guidelines for instillation quantity and dwell times as these may vary dependant upon the type of solution used.

Successful outcomes using NPWT on skin grafts dermal replacement and flaps

- Begin therapy as soon as possible after graft/flap placement
- Expect more drainage in the canister in the initial 24 hours of NPWT post-graft/flap, after which drainage usually tapers off significantly.
- In general, significant drainage in the tubing 24 hours plus post-graft/flap may indicate a complication underneath the dressing, please seek advice from the lead clinician.
- If there is any sign of infection, remove the dressing and assess the wound

Successful outcomes for tunnelled wounds - RENASYS® -G

- If the tunnel is larger than the channel drain, wrap the drain in wound filler prior to insertion
- Be sure to mark on the dressing and record in the patient's notes the exact number of pieces of wound filler that have been placed into all aspects of the wound to ensure that all pieces are removed during dressing changes.
- Ensure the tunnel fill material is visible in the wound bed to avoid the risk of material being 'lost' or missed at the next dressing change.

Successful outcomes using the bridging technique

- Wounds must be in relatively close proximity
- The intact skin between the wounds must be protected using transparent film or thin hydrocolloid
- It is important to place the RENASYS-G drain/RENASYS-F/P Port in a central location to ensure that exudate from one wound is not drawn across the other wound.
- All pieces of dressing must be in direct contact with each other

Successful outcomes for undermined wounds

- Always fill the defect to skin level with saline-moistened wound filler
- Choose the appropriate drain for the exudate type and volume
- Ensure the drain size is not larger than the space created by the undermining. A drain too large for the space will potentially cause pressure necrosis to the fragile skin bridges if they are overextended when the drain and wound filler are inserted.

Maintaining a seal

Maintaining a seal around the dressing is the key to successful NPWT. The following are among the best ways to maintain the integrity of the seal:

- Dry the peri-wound area thoroughly after cleansing. You may use a skin preparation agent to prepare the skin for the drape application (for example, a liquid surgical adhesive or liquid barrier film).
- For delicate peri-wound tissue or in areas that are difficult to dress, frame the wound with a skin barrier to enhance the seal.
- Try to position the drain on flat surfaces and away from the perineal area, bony prominences or pressure areas.
- Secure or anchor the drain with an additional piece of drape or tape several centimetres away from the dressing/wound. This prevents it from pulling on the wound area, which can cause leaks.

6. Healing progress – knowing when to stop or change treatment

Wound appearance and dimensions

The wound appearance should begin to improve within two dressing changes

- Wound dimensions should begin to decrease as the active state of healing progresses
- Weekly wound measurements should be taken and documented according to local guidelines for subsequent comparison and to effectively assess the progression of healing.
- As the wound continues to form granulation tissue, new epithelial growth should be seen at the wound edges.

Volume and appearance of exudate

- The exudate volume should gradually decrease over time
- The colour of the exudate may change from serous to serosanguineous and, whilst rare, some sanguineous drainage may also be noted during NPWT. This can be due to the increased blood perfusion and disruption of capillary buds at dressing changes as granulation tissue formation increases, or may happen if NPWT has been applied immediately post wound debridement and complete haemostasis has not been achieved. This should be minimal and revert to serosanguineous loss soon after commencement of therapy.

If large volumes of frank blood drain or this type of drainage persists at low volumes for a number of hours after the dressing change, therapy should be stopped and pressure applied on top of the dressing. The lead clinician should be contacted prior to removal of the dressing and the wound bed assessed to identify the underlying cause of the bleeding. Contact the lead clinician for advice about ongoing management prior to restarting the therapy. Consider dressing any small bleeding points with a haemostatic dressing and or applying pressure, follow local guidelines on achieving haemostasis. A 24-hour rest period is recommended prior to recommencing therapy.

Length of treatment

The length of treatment depends on the lead clinician's goal of therapy, wound pathology and size, and the management of patient co-morbidities. For chronic wound types, NPWT may be used for an extended period of time as long as satisfactory progress continues.

Discontinuing NPWT

Treatment should be discontinued when the goal of therapy has been met. In some cases this will be full closure of the wound; in others the wound may be closed surgically.

Some measures of progress include:

- Decreased wound size (length, width, depth, undermining, tunnelling)
- Increased granulation tissue
- Increased epithelialisation
- Decreased wound odour
- Decreased wound pain
- Decreased volumes of exudate

As a general rule we advocate that this therapy should be reviewed against the outcome criteria set at the beginning of therapy, at each dressing change or, as a minimum, every 2 weeks.

Although individual circumstances will vary, therapy should be stopped if the wound shows no progress for one to two consecutive dressing changes and all efforts to encourage wound healing have failed.

7. Troubleshooting

Wound deterioration

If a wound has been progressing well from dressing change to dressing change but then deteriorates rapidly within 48 hours, consider the following interventions and where necessary seek the guidance/expertise of the lead clinician and contact your Smith & Nephew representative for specialist advice.

- Check for small leaks by listening for a whistling noise or moving your hand around the edges of the dressing while applying light pressure. Patch if necessary.
- Cleanse the wound more thoroughly during dressing changes
- Increase the frequency of dressing changes
- Assess the wound for clinical signs and symptoms of wound infection as per local guidelines, and if necessary obtain a microbiology culture or biopsy and treat accordingly.
- Consider debridement of the wound edges if they appear non-viable or rolled under as this may inhibit the formation of granulation tissue and migration of epithelial cells over the wound bed.
- If appropriate, assess for osteomyelitis. Examine any exposed bone and debride as necessary

If the wound assessment reveals dark discolouration:

- Rule out mechanical trauma with specific reference to weight bearing wound sites or during dressing changes caused by dressing adherence.
- Relieve wound of excessive pressure due to prolonged sitting, excess dressing in the wound, or pulling or stretching of the drape over the dressing.
- Avoid overpacking of the wound, the dressing should feel firm to the touch and be level with the wound margins when the vacuum is on and the dressing has had all of the air expelled.
- Decrease the NPWT target pressure by 10mmHg
- Check whether the patient is taking anticoagulant medication, and if so if so evaluate recent laboratory results.

If the wound appears white, excessively moist or macerated:

- Consider increasing the pressure in increments of 10mmHg to encourage the removal of excessive exudate
- Consider using a larger drain to facilitate removal of fluid
- Consider therapy on vs therapy off time

Patient experiencing pain

- If the patient reports discomfort at the wound site with the dressing in place and the suction on, that cannot be rectified by administering analgesia, the pressure should be reduced in 10mmHg reductions to a minimum pressure of -40mmHg. Below this, therapy should be stopped.

Safety alarms

All devices are equipped with alarms for the following errors. Errors are indicated through an audible signal and flashing LED.

- **Low Vacuum Alarm**

If the vacuum level is low or there is a leak in the system, the alarm will signal after 2 minutes. Pressing the Alarm Suppress button will silence the alarm for approximately 3 minutes. Once the system is sealed, the alarm will automatically reset.

- **High Vacuum Alarm**

This will only activate if pressure at the machine exceeds safe levels. The machine will alarm and stop active therapy immediately - please contact Smith & Nephew for advice/new device.

- **Canister full alarm**

If the canister is full an alarm will sound to alert user to change the canister

- **Line blockage alarm**

If there is a blockage in the tubing, an alarm will alert user. Identify blockage and flush line with sterile saline or water. If blockage cannot be resolved this way then changing the canister should resolve alarm state.

- **Low battery alarm**

Will indicate that the device is running low on battery power - plug into mains power to rectify

All devices have an alarm silence function which will mute the alarm whilst you try to rectify the problem. If not rectified the device will re-alarm after 3 minutes.

Appendix 1

Wound sealing kit guides

RENASYS®-G Kits (Gauze with drain)

S&N Code	Description	Kit Contents	
66800491	RENASYS-G Small Round (10Fr)	1 non-adherent gauze 7.6cm x 7.6cm 1 large transparent film 20cm x 30cm 1 saline bullet, 1 skin prep 1 wound ruler	1 pack antimicrobial gauze 10cm x 10cm 1 small round drain (10Fr) 1 ostomy paste 2 strips waterproof tape
66800492	RENASYS-G Small Flat	1 non-adherent gauze 1 large transparent film 20cm x 30cm 1 saline bullet, 1 skin prep 1 wound ruler	1 pack antimicrobial gauze 1 flat drain (10mm) 1 ostomy paste 2 strips waterproof tape
66800493	RENASYS-G Medium Channel	1 non-adherent gauze 7.6cm x 20.3cm 1 large transparent film 20cm x 30cm 1 saline bullet, 1 skin prep 1 wound ruler	1 pack antimicrobial gauze 15cm x 17cm 1 medium channel drain (15Fr) 1 ostomy paste 2 strips waterproof tape
66800494	RENASYS-G Medium Flat	1 non-adherent gauze 7.6cm x 20.3cm 1 large transparent film 20cm x 30cm 1 saline bullet, 1 skin prep 1 wound ruler	1 pack antimicrobial gauze 15cm x 17cm 1 flat drain (10mm) 1 ostomy paste 2 strips waterproof tape
66800495	RENASYS-G Large Round Kit (19Fr)	2 non-adherent gauze 7.6cm x 20.3cm 2 large transparent film 20cm x 30cm 1 saline bullet, 2 skin prep 1 wound ruler	1 roll antimicrobial gauze 11.4cm x 3.7m 1 large round drain (19Fr) 1 ostomy paste 4 strips waterproof tape
66800496	RENASYS-G Large Flat	2 non-adherent gauze 7.6cm x 20.3cm 2 large transparent film 20cm x 30cm 1 saline bullet, 2 skin prep 1 wound ruler	1 roll antimicrobial gauze 11.4cm x 3.7m 1 flat drain (10mm) 1 ostomy paste 4 strips waterproof tape
66800932	RENASYS-G Large Irrigation/Aspiration	2 antimicrobial gauze rolls 11.4cm x 3.7m 1 large irrigation/aspiration drain 1 ostomy paste, 1 wound ruler	3 large transparent film 20cm x 30cm 2 saline bullet, 2 skin prep 4 strips waterproof tape
66800133	RENASYS-G Sterile Kit	1 pack antimicrobial gauze 10cm x 10cm 3 large transparent film 20cm x 30cm 4 strips waterproof tape	1 large antimicrobial gauze roll 11.4cm x 3.7m 1 flat drain (10mm)

RENASYS-G/P Kits (Gauze with Port application)

S&N Code	Description	Kit Contents	
66800882	RENASYS-G/P Gauze Dressing Kit with Port – Small Kit	1 RENASYS port application system 1 non-adherent gauze 7.6cm x 7.6cm 1 antimicrobial gauze 10cm x 10cm	1 large transparent film 20cm x 30cm 1 saline bullet, 1 skin prep wipe 1 wound ruler
66800883	RENASYS-G/P Gauze Dressing Kit with Port – Medium Kit	1 RENASYS port application system 1 non-adherent gauze 7.6cm x 20.3cm 1 antimicrobial gauze 15cm x 17cm	1 large transparent film 20cm x 30cm 1 saline bullet, 1 skin prep wipe 1 wound ruler
66800884	RENASYS-G/P Gauze Dressing Kit with Port – Large Kit	1 RENASYS port application system 1 non-adherent gauze 7.6cm x 20.3cm 1 antimicrobial gauze roll 11.4cm x 3.7m	2 large transparent film 20cm x 30cm 1 saline bullet, 1 skin prep wipe 1 wound ruler

RENASYS-F/P Kits (Foam with Port application)

S&N Code	Description	Kit Contents	
66800639	RENASYS F/P Foam Dressing Kit with Small Port Kit	Foam 10cm x 8 cm x 3cm 1 large transparent film 20cm x 30cm	1 RENASYS port application system
66800640	RENASYS F/P Foam Dressing Kit with Medium Port Kit	Foam 20cm x 12.5cm x 3cm 2 large transparent film 20cm x 30cm	1 RENASYS port application system
66800641	RENASYS F/P Foam Dressing Kit with Large Port Kit	Foam 25cm x 15cm x 3cm 3 large transparent film 20cm x 30cm	1 RENASYS port application system
66800713	RENASYS F/AB Foam Dressing Kit with Large Port Kit	2 elliptical perforated foam dressing 1 Organ Protection Layer (OPL)	6 large transparent film 20cm x 30cm 1 RENASYS port application system

Abdominal clinical guidelines available from Smith & Nephew Healthcare

Appendix 2

Preparing the wound bed

The principles of TIME have been formulated to help clinicians gain a better understanding of the pathogenesis of chronic wounds and can be used as a framework to guide clinical practice (Schultz, 2003).

Tissue, non-viable or deficient

Tissue management is defined as the removal of non-viable tissue and the encouragement of viable, well vascularised tissue to grow. The removal of non-viable tissue can be achieved by the process of debridement. This involves the removal of dead or necrotic tissue and foreign material from the wound and is an important step in wound bed preparation. Debridement enhances wound assessment, decreases the likelihood of infection and removes necrotic tissue, which otherwise would delay the formation of granulation and epithelial tissue. Devitalised tissues (eschar and slough) in the wound bed reduce the clinician's ability to assess the wound's depth, or the condition of tissue and surrounding structures. Necrotic tissue may mask signs of infection (it supports significant bacterial growth and is a physical barrier to healing). Devitalised tissue may also cause excessive amounts of proteases to be released, which have an extremely detrimental effect on healing. Natural mechanisms facilitate debridement, but wounds heal more rapidly if this process is accelerated.

Infection or inflammation

Wound bed preparation also identifies infection or inflammation as a barrier to healing. When preparing the wound bed it is critical to assess the nature and extent of the infection or inflammation component (also referred to as bioburden) so that these can be corrected to optimise wound healing.

Bacteria present in the wound may prevent healing, even when there are no obvious signs of infection. The clinician needs to identify when bioburden is acceptable, and when it reaches a level where bacteria contribute to impaired healing and intervene appropriately.

Moisture imbalance







The management of moisture within the wound environment is the third consideration for wound bed preparation. The goal is to identify factors which maintain the moisture equilibrium within the wound environment, in order to facilitate wound healing. These include addressing systemic factors highlighted during holistic patient assessment and local factors identified at the wound bed.

Edge of wound – non-advancing or undermined

Epidermal edge migration is very much dependent on the overall environment of the wound. Moisture balance, together with debridement and bacterial balance, are essential to achieving wound closure. But there are also other factors which may be preventing the wound edges from advancing. In chronic wounds the molecular and cellular processes are disrupted, leading to significant differences in the microenvironment of the wound, both in terms of the cellular components of the wound bed and the constituents of the exudate.





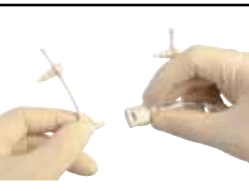








Appendix 3

RENASYS® -G quick reference dressing guide

		
1. Clean wound bed with normal saline if indicated.	2. Apply skin protection wipe to peri-wound skin.	3. Cut a single layer of non-adherent wound contact layer to fit wound dimensions.
		
4. Lay non-adherent wound contact layer into wound bed.	5. Moisten gauze with saline.	6. Place a layer of moistened gauze into wound bed.
		
7. If required, cut drain to fit wound dimensions. As a guide the drain should be at least 1–2cm shorter than the wound size.	8. Secure drain using strip paste beneath and on top of drain as shown.	9. Fill remaining defect to skin level with additional moistened gauze.
		
10. Cover wound and drain with drape with approx 3–5cm overlap onto surrounding skin.	11. Attach canister and filter to the device, secure tubing to the canister, connect patient tubing to canister tubing.	12. Connect the drain tubing to the canister tubing using the quick-click connector.
		NPWT 24-hour Clinical Support Line UK: 0800 9155394 Ireland: 1800 30 36 22
13. Turn on machine. Set desired negative pressure and start therapy.	14. Dressing should collapse and appear firm to touch and have a 'raisin-like' appearance.	



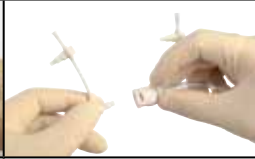





Appendix 4

RENASYS® -F/P quick reference dressing guide

		
1. Debride any necrosis/eschar from the wound bed if necessary. If appropriate, cleanse wound bed and dry as per local guidelines.	2. Apply NO-STING SKIN-PREP® or a thin hydrocolloid to the peri-wound skin if required. N.B. Skin sealant is not included as part of the RENASYS-F/P foam dressing kit.	3. Cut the foam to fit the size and shape of the wound. Do NOT cut the foam directly over the wound bed.
		
4. Place the foam into the wound cavity. Multiple pieces or layers of foam can be inserted into a cavity if required to ensure a perfect fit is achieved.	5. Cover the foam with transparent film. The film should extend 5cm beyond the wound margin to facilitate an adequate seal.	6. Ensure the film is securely anchored to the peri-wound area to maintain a good seal. Ensure the film is not stretched or applied under tension, or pressure applied to the foam as this may cause blistering when the NPWT is applied.
		
7. Cut a small circular hole in the centre of the film over the foam. The hole needs to be roughly 0.6cm in size. Remove any excess trimmed film.	8. Remove the backing from the Port dressing.	9. Align the opening of the Port over the hole in the film. Use gentle pressure to anchor the Port to the film.
		
10. Smooth the dressing down whilst removing the frame.	11. Connect the Port tubing to the canister tubing using the quick-click connector.	12. Switch on the device, set desired therapy setting and start therapy.
	NPWT 24-hour Clinical Support Line UK: 0800 9155394 Ireland: 1800 30 36 22	
13. The finished dressing should collapse, be firm to the touch and have a wrinkled appearance.		

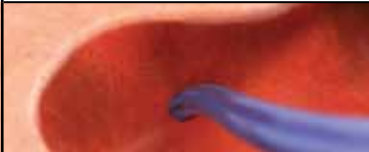Appendix 5

RENASYS® -G specialist dressing techniques

Undermining	
	
Option 1 – Follow instructions overleaf making sure that all undermined areas are filled with saline moistened gauze. The drain should also be inserted as described overleaf.	Option 2 – Wrap your selected drain in moistened gauze and coil into the wound. Fill remaining defect with saline-moistened gauze, secure drain with strip paste and seal with drape.
Tunnelled wounds	
	
Option 1 – When the tunnel is only slightly larger than the drain circumference – insert channel drain directly into the tunnel until resistance is felt and then draw back at least 1cm to prevent excess pressure at the wound base. Coil the remaining drain into the wound bed then fill the defect with saline moistened gauze, secure drain with strip paste and seal with drape.	Option 2 – When the tunnel is larger than the drain circumference, wrap your chosen drain in saline moistened gauze, insert into the tunnel until resistance is felt and then draw back at least 1cm to prevent excess pressure at the wound base. Coil the remaining drain into the wound bed then fill the defect with saline moistened gauze, secure drain with strip paste, and seal with drape.
Bridging technique	
	
Option 1 – Treating two wounds in close proximity with one pump – fill both wounds with saline moistened gauze, protect intact skin between the wounds with drape then connect both wounds with a strip of gauze, place drain between the wounds on the strip of gauze connecting the two wounds, secure the drain with strip paste, seal all wounds and the drain with drape.	Option 2 – Where only one wound is present this technique can be used to move the drain tubing from wound's periphery to a non-weight bearing area. Fill the wound defect with gauze, apply drape onto the skin to create a protective bridge between the wound and the upper body surface. Run a strip of gauze on top of the drape in a continuous strip from the wound to the non-weightbearing surface. Secure the drain with strip paste, cover the wound and all gauze and the drain with drape.
Skin grafts	Skin flaps
	
Cover graft with non-adherent wound contact layer extending at least 1cm beyond the suture/staple line, place a single layer of moistened wound filler over the prepared area, then place a flat drain as close to the middle of the wound as possible. Cut to fit the wound dimensions if required. Place a single layer of moistened wound filler over the drain and seal.	Cover the intact skin of the flap with transparent film to within approximately 1cm of the suture line. Cover the opposite side of the suture line with transparent film to within approximately 1cm of the suture line (creating a 'ring' of exposed skin around the suture line). Cover this with non-adherent wound contact layer. Then place a single layer of moistened wound filler over the prepared area, place a flat drain as close to the middle of the wound as possible. Cut to fit the wound dimensions if required. Place a single layer of moistened wound filler over the drain and seal.

Appendix 6

RENASYS® –F/P Foam specialist dressing techniques

Undermining

Follow instructions overleaf making sure that all undermined areas are filled with foam and that the wound margins are not distorted following the insertion of the foam. If multiple pieces of foam are used please ensure that the number of pieces used is clearly documented in the patient's notes and on the outer surface of the dressing.





Tunnelling

For small tunnelled areas, Smith & Nephew recommends the use of the RENASYS-G dressing pack with a channel drain.

However if the tunnelled area is easy to access and see then foam can be cut to fit the tunnel perfectly and the remaining cavity filled as per the instructions overleaf. It is good practice to ensure that the cut piece of foam inserted into the tunnel is longer than the tunnel and is clearly visible in the wound bed. The foam should also be wrapped in a suitable wound contact material prior to insertion to avoid adhesion to the tissue and facilitate removal without trauma or foam fragmentation.

Appendix 6

RENASYS® -F/P Foam specialist dressing technique: Bridging two wounds

		
1. Debride any necrotic tissue / eschar if necessary. Cleanse the wound bed and pat dry as per protocol.	2. Apply NO-STING SKIN-PREP® or a thin hydrocolloid to the peri-wound skin if required. N.B. NO-STING SKIN-PREP® wipe is not included within the dressing kit.	3. Cut a strip of foam from around the edge of the foam block. Do NOT cut the foam directly over the wound bed.
		
4. The foam strip will be used to create the foam bridge between the two wound sites.	5. Cut the foam to fit the size and shape of the respective wounds. Do NOT cut the foam directly over the wound bed.	6. Place the pieces of foam into the respective wound cavities. Multiple pieces or layers of foam can be inserted into a cavity, if required, to ensure a perfect fit is achieved.
		
7. Cut a piece of transparent adhesive film to size that is large enough to protect the intact skin between the wounds. Remove the backing film and apply the film to the skin between the wounds	8. Place the cut strip of foam between the two wounds to create the foam bridge.	9. Seal in all pieces of foam with transparent adhesive film.
		
10. Cut a small circular hole in the centre of the film, over the foam bridge. Ensure any loose film dressing is removed. The opening of the Port will be aligned over the hole to deliver Negative Pressure.	11. Remove the backing from the Port dressing. Align the opening of the Port over the hole in the film. Use gentle pressure to anchor the Port to the film.	12. Smooth down the dressing whilst removing the frame.
		NPWT 24-hour Clinical Support Line UK: 0800 9155394 Ireland: 1800 30 36 22
13. Connect the Port tubing to the canister tubing using the quick-click connector.	14. Switch on the device, set desired pressure setting and start therapy. The finished dressing should collapse, be firm to the touch and have a wrinkled appearance.	




Appendix 6

RENASYS® -F/P Foam specialist dressing technique: Bridging to a non-weightbearing area

		
<p>1. Debride any necrotic tissue / eschar if necessary. Cleanse the wound bed and pat dry as per protocol.</p>	<p>2. Apply NO-STING SKIN-PREP® or a thin hydrocolloid to the peri-wound skin if required. N.B. NO-STING SKIN-PREP wipe is not included within the dressing kit.</p>	<p>3. Cut a strip of foam from around the edge of the foam block. Do NOT cut the foam directly over the wound bed.</p>
		
<p>4. The foam strip will be used to create the bridge from the wound to the non-weight-bearing area.</p>	<p>5. Cut the foam to fit the size and shape of the wound. Do NOT cut the foam directly over the wound bed.</p>	<p>6. Place the foam into the wound. Multiple pieces or layers of foam can be inserted into a cavity, if required, to ensure a perfect fit is achieved. Secure in place with a strip of film.</p>
		
<p>7. Measure a piece of film that is long enough and wide enough to run in a continuous piece from the wound to the non-weightbearing area. This will be used to create the bridge and protect the intact skin. Remove the backing paper from the film and apply it to the skin.</p>	<p>8. Measure a piece of foam that is long enough to run in a continuous piece from the wound to the non-weightbearing area. N.B. the piece of foam must be narrower than the piece of film that you have applied. This will be used to create the bridge for the Port application.</p>	<p>9. Seal in all pieces of foam with transparent adhesive film.</p>
		
<p>10. Cut a small circular hole in the centre of the film, at the non-weightbearing end of the foam bridge. Ensure any loose film dressing is removed. The opening of the Port will be aligned over the hole to deliver Negative Pressure.</p>	<p>11. Remove the backing from the Port dressing. Align the opening of the Port over the hole in the film. Use gentle pressure to anchor the Port to the film.</p>	<p>12. Smooth down the dressing whilst removing the frame.</p>
		<p>NPWT 24-hour Clinical Support Line UK: 0800 9155394 Ireland: 1800 30 36 22</p>
<p>13. Connect the Port tubing to the canister tubing using the quick-click connector.</p>	<p>14. Switch on the device, set desired pressure setting and start therapy. The finished dressing should collapse, be firm to the touch and have a wrinkled appearance.</p>	

Appendix 6

RENASYS® -F/P Foam specialist dressing technique: Dressing wounds smaller than the RENASYS Port

		
<p>1. Debride any necrotic tissue / eschar if necessary. Cleanse the wound bed and pat dry as per protocol.</p>	<p>2. Apply a thin hydrocolloid or transparent adhesive film to the peri-wound skin. This should extend sufficiently to prevent the peri-wound skin from coming into contact with the larger piece of foam (see steps 5 and 6)</p>	<p>3. Cut the foam to fit the size and shape of the wound. Do NOT cut the foam directly over the wound bed.</p>
		
<p>4. Place the foam into the wound cavity.</p>	<p>5. Cut a larger piece of foam ensuring it is larger than the circumference of the Port.</p>	<p>6. Place the larger foam piece on top of the first piece of foam dressing to create a mushroom effect.</p>
		
<p>7. Cover the foam with transparent film. The film should extend 5cm beyond the wound margin to facilitate an adequate seal.</p>	<p>8. Cut a small circular hole in the centre of the film to expose the foam. Ensure any loose film dressing is removed. The opening of the Port will be aligned over the hole to deliver Negative Pressure.</p>	<p>9. Remove the backing from the Port dressing. Align the opening of the Port over the hole in the film. Use gentle pressure to anchor the Port to the film.</p>
		
<p>10. Smooth down the dressing whilst removing the frame.</p>	<p>11. Connect the Port tubing to the canister tubing using the quick-click connector.</p>	<p>12. Switch on the device, set desired pressure setting and start therapy. The finished dressing should collapse, be firm to the touch and have a wrinkled appearance.</p>

Appendix 6

RENASYS® -G/P dressing technique

		
<p>1. Debride any necrotic tissue / eschar if necessary. Cleanse the wound bed and pat dry as per protocol.</p>	<p>2. Apply SKIN-PREP® to the peri-wound skin.</p>	<p>3. Cut a single layer of non-adherent wound contact layer to fit the wound dimensions and place into the wound bed.</p>
		
<p>4. Moisten the antimicrobial gauze with saline.</p>	<p>5. Place the moistened gauze into the wound bed filling to skin level.</p>	<p>6. Cover the gauze with transparent film. The film should extend 5cm beyond the wound margin to facilitate an adequate seal.</p>
		
<p>7. Measure a piece of film that is long enough and wide enough to run in a continuous piece from the wound to the non-weightbearing area. This will be used to create the bridge and protect the intact skin. Remove the backing paper from the film and apply it to the skin.</p>	<p>8. Cut a small circular hole in the centre of the film over the gauze. The hole needs to be roughly 0.6cm in size. Remove any excess trimmed film.</p>	<p>9. Remove the backing from the Port dressing.</p>
		
<p>10. Align the opening of the Port over the hole in the film. Use gentle pressure to anchor the Port to the film.</p>	<p>11. Smooth the dressing down whilst removing the frame.</p>	<p>12. Connect the Port tubing to the canister tubing using the quick-click connector.</p>
		<p>NPWT 24-hour Clinical Support Line UK: 0800 9155394 Ireland: 1800 30 36 22</p>
<p>13. Switch on the device, set desired therapy setting and start therapy.</p>	<p>14. The finished dressing should collapse, be firm to the touch and have a wrinkled appearance.</p>	

Appendix 7

NPWT Quick Reference Clinical Guidance

Wound Type		Suggested Filler	Pressure Setting	Wound Contact Layer	Special Considerations
Acute / Traumatic		Gauze or Foam	-80 to -120mmHg	If tendon, nerves, blood vessels, bone, viscera, organs exposed	Infected wounds. Exposed blood vessels and structures should be protected and care taken to avoid desiccation of tendon and nerve sheaths if exposed
Cardiothoracic (Partial thickness)		Foam	-80 to -120mmHg	If bone / heart is exposed, the lead clinician must take responsibility for treatment choices	If heart is exposed, ensure that the cavity is packed sufficiently, but not excessively, to allow no displacement of the heart
Partial thickness Abdominal (Muscle intact)		Gauze or Foam	-80 to -120mmHg	Not required unless adhesion occurs	Layer the filler into the wound to ensure it fits the cavity from the bottom up to ensure contact with the wound margins
Full thickness Abdominal (Muscle intact)	Decompression & closure	Abdominal dressing	-60 to -120mmHg	A single piece of wound contact layer large enough to cover all exposed viscera should be used	The lead clinician must take full responsibility for treatment choices and materials/ method of NPWT and pressure setting used
	Healing by secondary intention	Gauze	-60 to -120 mmHg	Essential to protect exposed viscera and organs	Use a single layer of wound contact layer to ensure any exposed viscera is protected and to ensure it is removed and replaced at each dressing change. Extra care should be taken when patients have inflammatory bowel disorders/infected/inflamed bowel. Lead clinician must be consulted prior to commencement of therapy.
Pressure Ulcers		Gauze	-60 to -80 mmHg	Yes if tendon / bone exposed	Always address underlying aetiology and factors affecting healing – if slough or necrosis present debride prior to commencement of NPWT or consider using foam
Diabetic foot ulcers post surgery		Gauze	-60 to -80 mmHg	Yes if tendon / bone exposed	Dressing should be placed as soon after surgery as is practical once haemostasis is achieved
Diabetic foot ulcers		Gauze or Foam	-60 to -80 mmHg	Yes if tendon / bone exposed	Sharp debridement of any devitalised tissue should occur prior to placement of NPWT
Meshed grafts / bioengineered tissue		Gauze	-50 to -80 mmHg	Yes to avoid adherence of filler to the graft	Dressings are typically removed after 5 days or as per clinician instructions.
Flaps		Gauze	-50 to -80 mmHg	Yes to avoid adherence of filler to the graft	Dressings are typically removed after 5 days or as per clinician instructions.
Dehiscid surgical wounds		Foam	-80 to -120mmHg	Yes if tendon, bone, internal organs are exposed	Consideration should be taken to debride any devitalised tissue prior to commencement of NPWT
Chronic wounds		Gauze	-80mmHg	Yes if tendon / bone exposed	Always address underlying aetiology and factors affecting healing
Enteric fistula (inclusion of fistula in dressing)		Gauze	-80mmHg	Yes to protect exposed viscera and or organs	See specialist dressing techniques
Enteric fistula (isolation of fistula)		Gauze/Foam	-80mmHg	Yes to protect exposed viscera and or organs	See specialist dressing techniques

**24hr Clinical Support
Freephone Number**

**UK: 0800 9155394
Ireland: 1800 30 36 22**

NEW

Wound Management

Smith & Nephew
Healthcare Ltd
Healthcare House
101 Hessle Road
Hull HU3 2BN

T 01482 222200
F 01482 222211

Customers in Ireland please call:
T: 1890 224226 for product enquiries
and wound care advice

®Trademark of Smith & Nephew
™All trademarks acknowledged
© Smith & Nephew March 2012
34279